


Dwg. Ref.	Qty. Per	Part Number	Description	Materials/Remarks
		1101110-21	SHELL	
1	1		Shell	Filament wound epoxy/glass composite- Head locking grooves integrally wound in-place.
2	A/R	ORDER SECTION	F/C Port	CF3M
3	A/R		F/C Port Seal	EPDM
			HEAD	
4)	2	52301	DISHED HEAD	Noryl
(5)	2	45321	Head Seal	ETHYLENE PROPYLENE - QUAD SEAL
6	2	AR	Adapter ,seal	EPDM - O-ring
			HEAD INTERLOC	K .
7	2	47336	Retaining Ring	316 ZZT
			VESSEL SUPPO	RT
8	3	52169	Universal Saddle	Engineering Thermoplastic
9	3	45042	Strap Assy	304 Stainless Steel - PVC cushion
10	6	46265	Strap Screw	5/16-18 UNC, 18-8 Stainless Steel
			ELEMENT INTER	ACE
11	2	AR	Adapter	Engineering Thermoplastic
12)	A/R	A/R	PWT SEAL	EPDM
13	1	52609	Thrust Cone	Engineering Thermoplastic

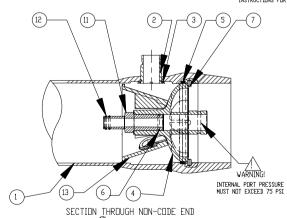

ITEM(3) DOWNSTREAM ONLY

NOTES

- MAX, ANGULAR VARIATION BETWEEN ANY PORTS± 0.5°
- SHELL EXTERIOR COATED WITH WHITE, HIGH GLOSS POLYURETHANE PAINT
- DIMENSION IN INCHES (MM APPROX.)
- NOT TO BE USED FOR CONSTRUCTION UNLESS CERTIFIED

Shell Length Code	L.D.A. IN (MM)	Span IN (MM)	Span IN (MM)	Approx. Weight LB (KG)
6	258.2	247.0	92 X 2	95
	(6558)	(6274)	(2337)	(43)



DRAWN PGS CHECKED SM	CODELINE 80R05 MEMBRANE HOUSING					
DATE	ECN	SHEET	SIZE	NUMBER	REV	
07 SEP 04	613	1 DF 2	A3	99143	C	

RATING:

DESIGN PRESSURE	75 PSIG at 120°F
	(0.52 MPa at 49°C)
MIN. OPERATING TEMP	20°F
	(-7°C)
FACTORY TEST PRESSURE	CE
	112.5 PSIG
	(0.78MPa)
QUALIFICATION PRESSURE	450 PSI
	(3.10 MPa)

INTENDED USE:

The CodeLine Model 80R05 Fiberglass RO Pressure Vessel is designed for continuous, long term use as a housing for reverse osmosis membrane elements to desalt typical brackish waters at pressures up to 75 psi. Any make of eight-inch nominal diameter spiral-wound element is easily accommodated; the appropriate interfacing hardware for the element specified is furnished with the vessel.

The CodeLine Model 80R05 must be installed, operated and maintained in accordance with the listed precautions and good industrial practice to assure safe operation over a long service life.

The high performance Filament wound FRP shell must be allowed to expand under pressure; undue restraint at support points or piping connections can cause leaks to develop in the shell. This side-ported vessel requires special precautions in mounting and connection to piping so that the vessel will not be subjected to excessive stress due to bending moments acting at the side openings in the fiberglass shell. The end closure, incorporating close fitting, interlocking metal components, must be kept dry and free of corrosion; deterioration can lead to catastrophic mechanical failure of the head.

Pentair Water will assist the purchaser in determining the suitability of this standard vessel for their specific operating conditions. The final determination however, including evaluation of the standard material of construction for compatibility with the specific corrosive environment, shall be the responsibility of the purchaser. Alternate materials with enhanced corrosion resistance are available on special order.

Specifications are subject to change without notice.

PRECAUTIONS:

- DO...read, understand and follow all instructions; failure to take every precaution will void warranty and may result in vessel failure
- DO...mount the shell on horizontal members at span "S" using compliant vessel supports furnished; tighten hold down straps just snug
- DO...align and center side ports with the manifold header. Correct, causes of misalignment in a row of vessels connected to the same header
- DO...use flexible type grooved-end pipe couplings, Victaulic® Style 77 or equal, at side ports; allow full, 0.125 inch gap between port and piping, and position piping to maximize flexibility of connection.
- DO...provide flexibility in, and support for piping manifolds so that vessel can grow in length under pressure without undue restraint; provide additional flexible joints in large pipes leading to manifold header.
- DO...provide overpressure protection for vessel set at not more than 105% of design pressure
- DO...inspect end closures regularly; replace components that have deteriorated and correct causes of corrosion
- DO NOT...work on any component until first verifying that pressure is relieved from vessel
- DO NOT...make rigid piping connections to ports or clamp vessel in any way that resists growth of fiberglass shell under pressure;
 - *** Δ DIA = 0.015 in. (0.4mm) and
 - *** Δ L = 0.2 in. (6mm) for a length code –7 vessel
- DO NOT... hang piping manifolds from ports or use vessel in any way to support other components
- DO NOT...tighten Permeate Port connection more than one turn past hand tight
- DO NOT... operate vessel without connecting both Permeate Ports internally to complete set of elements or otherwise plug ports internally so that external piping connection is not subjected to feed pressure
- DO NOT...install Spacer on downstream end of vessel
- DO NOT...operate vessel without Thrust Cone installed downstream
- DO NOT...pressurize vessel until double-checking to verify that the Locking Ring is in place and fully seated.
- DO NOT...operate vessel at pressure and temperature in excess of its rating.
- DO NOT...operate vessel with permeate pressure in excess of 75 psi at 120°F (0.52 MPa at 49°C).
- DO NOT...tolerate leaks or allow end closures to be routinely wetted in any way
- DO NOT...operate outside the pH range of 3-10.

ORDERING:

Using the chart below, please check the features you require and fax them with your purchase order to our customer service department for further processing.

For optional materials and / or feature not listed below, please consult the factory for pricing and availability

VESSEL LENGTH CODE – please check one

MODEL	80R05	П-1	L□ -2.	П-3 Г	1 -4 □ -'	5 П -6 П -

MEMBRANE BRAND AND MODEL - please check one and fill in information

Please supply adapters for the following mem	ibrane brand and specific model
BrandModel_	
Membrane brand and model information is no Water on or before the following date.	ot currently available, but will be supplied to Pentair

CERTIFICATION REQUIRED

- □ CE Marked
- ☐ Standard, Certified by Pentair water.

MATERIAL AND PORT CONFIGURATIONS OPTIONS – please check one

- □ Standard: all materials and port configurations as per drawing 99143 on the previous page NOTE: The options listed below will increase the vessel price. Call factory for pricing details.
- Option: Customer specified port configuration. Using the chart below, please indicate the customized options you require for each end of the pressure vessel (multiple options are available at each end).

(Please consult factory as these options will affect pricing and vessel lead time)

FEED PORT CONFIGURATION

Standard – 1½" IPS pipe, grooved ends, with ports in-line
Optional – Multi-Ports TM
Using the instructions in Order Specification Sheet #99007
please fill out your feed port configuration in the
space below. List port location first, followed by port
size for each choice.

Serial number end	
Opposite end	

PERMEATE PORT CONFIGURATION:

☐ Standard 2" Victualic

For complete information on proper use of the vessel Please refer to the 80R Series USER'S GUIDE

	PORT SIZE CODE
D	1½" GROOVED END
Е	2" GROOVED END
F	2½" GROOVED END

